

i-Guide Navigation Tips

- Yellow is always the highlight color. As you navigate listings using your remote, the highlight appears on screen to indicate your current selection.
- Press the ▲▼◀▶ buttons on your remote to move the highlight.
- Press OK to make your selection.
- Press the EXIT button on your remote to return to watching TV.

Remote Control Features

VOD

Direct Access to Video On Demand, where available

Replay

Replays last 15 seconds of program

Help

Learn more about a feature

PAGE

Scroll to the next or previous page of listings

Exit

Return to watching television

OK

Select a highlighted item; or while watching a program, press to display or remove the Flip Bar or Mini Guide

Guide

See program listings for the current time

Day

See listings for the next or previous day*

Numbers

Press channel numbers, then OK/SEL to tune to a channel

PPV

Direct Access to Pay-Per-View (PPV), where available

VCR Controls

Controls VCR and Digital Video Recording (if available)

LiveTV

Displays live television programming

FAV

Tune to your Favorite channels, once you set them up

CHAN

Change channels and access the Flip Bar

LAST

Return to the previous screen or channel

Info

See program information

Arrows

Use to highlight guide features, or while watching television, press to begin browsing. Note: Arrows control playback of recorded programs with DVR

MENU

Enter and exit the Main Menu

SWAP

Swap between television tuners

Note: Remote pictured may not reflect your actual remote. Basic functions should be the same.

* Amount of programming data varies by system.